

Sette™ 30

Thank you for choosing the Baratza Sette 30 for your home grinding needs!

This is just a quick start guide. If you would like more detailed instructions, please skip ahead to the full manual, found online at baratza.com/documentation.

Setup:



With the hopper lid in place, mount the hopper by lining up the hopper's bean shutoff knob at the 11:00 position (back left). Press the hopper down, and rotate clockwise until the alignment tabs on the front are aligned. Note: Grinder motor will not turn on with the hopper removed. Flip the bean shutoff knob to the "open" position and pour in desired quantity of roasted, whole coffee beans.

Grind Size Adjustment:

The adjustment ring moves from a coarse setting (31) to a fine setting (1). With the grinder running, turn the knob to the right to move from coarse to fine. For espresso, start at 3. For manual brew, start at 20.

Grinding Operation:

Place the grounds bin on the arms. Use the up and down arrows to change and set your desired grind time. Note: The Sette 30 grinds 3 to 4.5 grams per second, dependent on roast and grind setting. Use this throughput rate to estimate how long to run the machine for your desired dose. Press Start (>||) button to begin

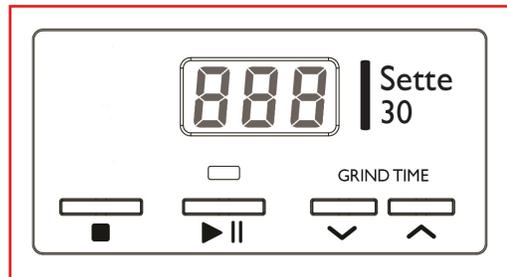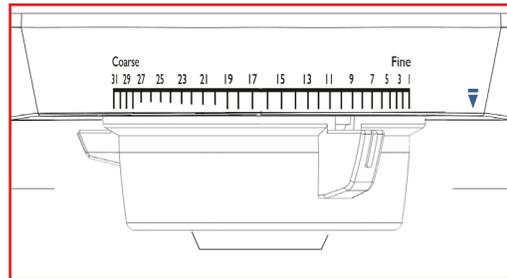

grinding. While grinding, the screen will count UP in seconds and stop when the preset time is reached, and the display will reset again to the programmed time. For manual operation, press and hold the START button until you obtain the desired amount of coffee, then release the START button. The grinder will then stop with the screen showing the total amount of seconds run. To get out of manual mode, press STOP.

First Use:

Before grinding coffee to be brewed, grind a handful (~40g) on setting 15 and discard. This begins the burr seasoning process and prepares the grinder for normal operation.

WARNING: The Sette grinds at a very high speed, be careful not to overfill your bin! If a mound of coffee backs up into the chute it will clog the grinder and blow the internal fuse.

Bag of Tools:

We have included a small bag with a 5mm hex key and burr shims for calibration. Installing a shim is only needed if the grind at setting 1 is not quite fine enough. In our experience, installation of a shim is generally needed after 1-2 kilos of espresso grinding, but may be needed before that. Shimming will likely be needed, at some point, based on use.

When needed, installation of just 1 shim is recommended and will shift the grind finer by about 6 settings. Installing 2 shims at once can shift the grind range to be so fine that it causes undue stress.

Detailed shimming instructions can be found in the full manual.

Need Help?

If you have any questions or concerns, please email: support@baratza.com or call (425) 641.1245

The full manual can be found on our website at: www.baratza.com/documentation/

For video instructions and troubleshooting guides: baratza.com/troubleshooting

SAFETY INFORMATION:

Please read the information below very carefully. It contains important safety information for this appliance. Please keep these instructions for future reference.

- ! Use only with AC current and the correct voltage. See the label on the base of the grinder to determine the correct voltage.
- ! Only clean the grinder housing with a dry or slightly damp cloth. Do not immerse the grinder, plug or cord in water or any other liquid.
- ! Baratza will not accept any liability for damage, injury, or warranty if the grinder is used other than for its intended purpose (i.e. grinding roasted whole coffee beans) or is improperly operated or repaired.
- ! Keep the appliance and its cord out of reach of children aged less than 8 years
- ! Do not operate the grinder with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- ! Do not leave your grinder unattended while turned ON.
- ! This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ! Cleaning and user maintenance shall not be made by children without supervision.
- ! Always unplug the grinder from the electrical supply before assembling, disassembling or cleaning.
- ! To unplug, grasp plug and remove from the outlet. Never pull on the cord.

CAUTION: ALWAYS unplug the electrical supply cord prior to cleaning the grinder.