

Baratza Adjustment Ring

Applies To Baratza Starbucks Barista, Maestro, Maestro Plus, and Virtuoso

Tools Needed: #2 Flathead screwdriver


All clock positions are in reference to the front of the grinder being 6 o'clock

Before step 1- UNPLUG IT!

Remove the hopper, grounds bin, knob, silicone seal, and upper ring burr

Remove the case

Turn the adjustment ring clockwise about 5 clicks. Lift the micro switch vertically up and off the two posts it sits on, let it dangle to the side out of the way (no need to unplug the leads to it)

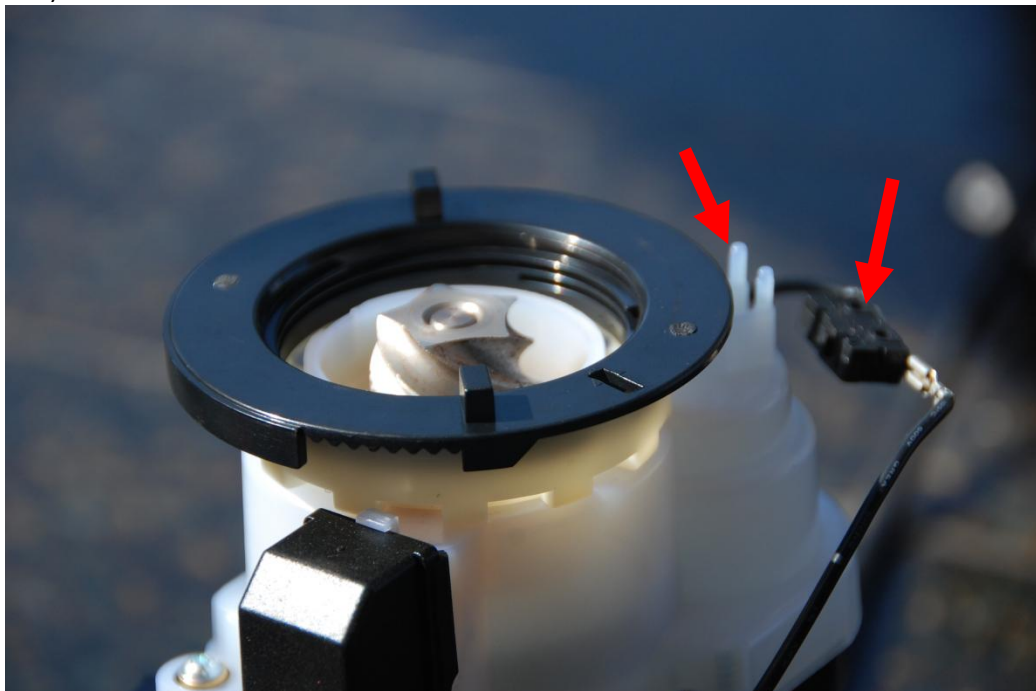

Using a screwdriver, pry the calibration ring off, there are 3 snap-tabs that hold it down. One tab is at 7 o'clock, one at 3 o'clock, and one at 11 o'clock. Put the screwdriver as pictured and push down on the handle gently to pop it up and off the tab. Repeat to release all 3 tabs.



After it lifts off, be careful not to lose the black plastic detent (circled in red)- this is what makes the clicking sound as the hopper is adjusted.



TO REASSEMBLE NEW ADJUSTING RING

Make sure the cutout slot that is circled in red is at 6 o'clock. Make sure the black plastic detent is sitting in the column with the pointed side facing up (like the picture above). Press down evenly on the adjustment ring, snapping it back into place. Rotate the adjustment ring fully counterclockwise until it stops. Place the micro switch back onto its' two posts. Re-assemble and you are ready to grind.

