


# ESATTO™

*Grind by Weight Accessory*

## *Operations Manual*

*ESATTO™ shown with  
Preciso™ Grinder*

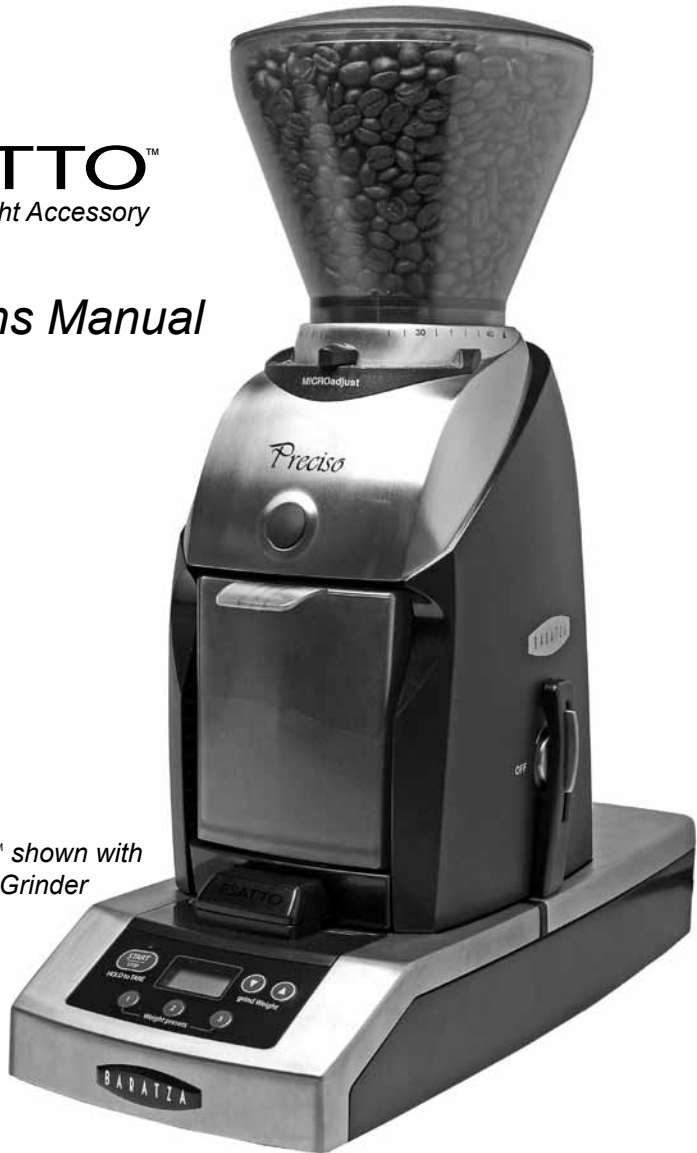

**BARATZA™**



# ESATTO



Grind by Weight Accessory

## Table of Contents

Introduction .....	1
Overview and Controls .....	2
Safety Information.....	3
Assembly .....	4
Operations and Programming .....	6
Care and Cleaning .....	7
Warranty and Service .....	8

## Introduction

The Baratza ESATTO™ is an accessory that is designed specifically for use with your Baratza Maestro Plus™, Virtuoso™ or Preciso™. This innovative addition to your grinder will allow you to grind precise dosages of coffee using real-time weight-based control. With its easy assembly and simple operation, you will be automatically dosing ground coffee to within + / - 0.1 gram repeatedly.

Operations manuals are available in the following languages at [www.baratza.com](http://www.baratza.com)

- English.pdf
- Spanish.pdf
- French.pdf

# ESATTO™

*Parts Identification*



# Safety Information

## Important Information

Please read the information below very carefully. It contains important tips for the use, safety, maintenance and care of this appliance. Please keep these operating instructions for future reference.

Your new ESATTO™ is rated for either 120 VAC or 230 VAC. Please confirm the voltage of your ESATTO™ on the nameplate attached to the bottom of the unit. The 120 VAC ESATTO™ can be used from 100 to 130 VAC and the 230 VAC ESATTO™ can be used from 200 to 240 VAC. Please insure your supply voltage range matches the nameplate voltage on your ESATTO™. Only clean the ESATTO™ housing with a dry or slightly damp cloth. Do not use this unit for anything other than its intended use. If you cannot remedy a malfunction, please visit the web at [www.baratza.com](http://www.baratza.com) for assistance. Repairs are to be performed only by authorized service centers. An improperly repaired ESATTO™ is a source of risk to the user and voids the warranty. Baratza will not accept any liability for damage or injury if the ESATTO™ is used other

than for its intended purpose or is improperly operated or repaired. All warranty claims will be void.

## For Your Safety

Do not operate the ESATTO™ with a damaged cord or plug, or if the ESATTO™ malfunctions. Do not leave your ESATTO™ unattended while turned ON.

## Caution

Unplug the ESATTO™ from the electrical outlet before cleaning.

To unplug, grasp plug and remove from the outlet - never pull on cord. Keep your ESATTO™ out of the reach of children. Do not immerse the ESATTO™, plug or cord in water or any other liquid.

## Assembly

1. Remove the grounds bin from the unit and set aside.
2. Remove the single Phillips head screw from the center rear of the rear metal casting cover and slide the rear casting rearward 1cm to remove it. (see photo #1).



Photo #1

3. **You must remove the rubber feet from the bottom of the grinder.** Use a pair of side cutters or a butter knife to pry the feet out. (See photo #2).



Photo #2

4. Coil as much of the cord into the hole in the bottom of the grinder, about 1/3 will fit. (see photo #3).

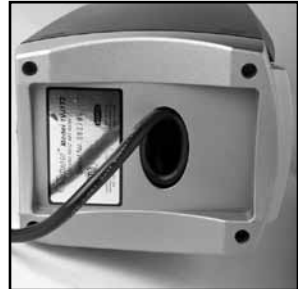


Photo #3

5. Remove the grounds bin from the grinder and slide the grinder carefully into the ESATTO™ from the rear going forward until the grinder fits tightly against the front casting. (See photos #4 & #5).



*Photo #4*



*Photo #5*

6. Once the grinder is in place, plug the grinder cord into the AC receptacle inside the base of the ESATTO™, and coil the remaining cord in the space under and behind the grinder. (see photo #6).



*Photo #6*

7. Slide the cast metal cover into place from the rear, taking care to see that the front “fingers” lock into correct position. (see photo #7).



*Photo #7*

8. Insert the Phillips screw into the rear of the casting to secure the casting in place.

9. Install the ESATTO™ timer knob retainer by placing the slot over the blade of the knob, rotate the knob until the retainer is vertical, then slide the retainer into the hole in the base of the ESATTO™. The knob will then be held in the ON position.  
(See photo #9 & #10).



*Photo #9*



*Photo #10*

10. Plug in the ESATTO™ to an AC supply.

## Operation and Programming

### Start / Stop / Tare

To accurately weigh the coffee as it grinds you must first Tare, (zero out) the weight of the grounds bin. To do this place the EMPTY grounds bin on the weight platform, then press and hold the Tare button until the display reads 00.0. The ESATTO™ will now display only the weight of the coffee as it is ground.

Press the Start button to start the grinder. It will stop automatically stop when the pre-programmed weight has been ground. If you would like to Stop the grinder sooner, press the button a second time.

### Up / Down Arrow

Press either of these buttons to change the weight value in Grams, displayed in the LCD window

### Programmable Dosage Buttons 1 - 2 - 3

Each of these buttons can store a programmable weight value. Simply press the up or down arrow to select the number of grams you desire, then press and hold the button you want the displayed weight stored to. When the display

blinks, release the selected button. Repeat for each of the three buttons. The programmed weights will remain stored in memory even if the ESATTO™ is unplugged.

### **Repeatability and Accuracy**

Accurate repeatability is the goal with the ESATTO™. With all grinders, the output in grams/second varies with the grind coarseness. At finer settings (i.e Espresso) the Preciso™ (for example) will produce about 1.6 g/sec and at French Press it will produce 2.5 g/sec. The beauty of real-time weight-based grinding is that using a scale eliminates almost all of this variability.

### **Care and Cleaning**

If the weight display does not count up properly when grinding coffee, remove the grounds bin and blow air under the weighing platform to clear any coffee grounds from the narrow gap under the platform. **DO NOT** use any type of tool under the weighing platform.



*The narrow gap under the weighing platform **MUST** be free of ground coffee.*



# Warranty and Service

**Length of Warranty:** One-year from date of purchase.

## United States Warranty Information

If your ESATTO™ fails within one year: e-mail: support@baratza.com or call 425-641-1245. Baratza will deliver an identical or comparable replacement to your door, free of charge, and arrange to have your “failed” unit returned to us.

When you receive your replacement, please use the carton and packing material and the return shipping label supplied to return the “failed” unit to us. Also, please include your name, address and telephone number.

## International Warranty Information

Go to: [www.baratza.com](http://www.baratza.com) for international warranty information.

## Proof of Purchase and Product Registration

You can register your ESATTO™ at [www.baratza.com](http://www.baratza.com). Registration will enable us to contact you in the unlikely event of a product safety notification and assist us in complying with the provisions of the Consumer Product Safety Act. The serial number is located on the bottom of the unit. Please keep your sales receipt that shows the date of purchase and complete the following for your personal records:

Serial Number (located on bottom of the unit): \_\_\_\_\_

Date Purchased: \_\_\_\_\_

Store: \_\_\_\_\_

### For repairs or parts contact

Baratza LLC  
3923-120th Ave. S.E.  
Bellevue, WA. 98006  
425-641-1245  
e-mail: support@baratza.com  
**Parts:** [www.baratza.com](http://www.baratza.com)



© 2011  
Baratza, LLC  
3923-120th Ave. S.E.  
Bellevue, WA. 98006  
[www.baratza.com](http://www.baratza.com)



rev: 071511